

## **GUIA DE CONFIGURACION DE ROUTERS LINKSYS**

**PASO 1**: Ingrese a la configuración de su router, generalmente es http://192.168.1.1 / en su navegador con los datos de acceso ususario: admin y clave: admin si no es esa clave, puede estar escrita debajo del equipo, o en su defecto resetee el equipo apretando 30 segundos el botón de reset con una birome o escarbadientes.

Archivo Editar Ve	r <u>H</u> istorial	Marcadores	Herramien <u>t</u> as	Ayuda
🕖 📵 Página de inici	o de Mozilla Fir	e × +	<u>g</u>	
( http://19	2.168.1.1/			
Se requiere autenti	ación			X
?	http://		está pidiendo us	uario y contraseña. El sitio dice: "WRT54G2"
Nombre de usuario:	admin	-		
Contraseña:	•••••			
		Acepta	ar Cancela	ar

**PASO 2**: En la primer pantalla, asegúrese que internet connection type está en DHCP Luego, en hostname puede completar su apellido (para identificar mas fácilmente el equipo) En la sección de DHCP coloque Static DNS1: 190 112 219 66 y 8 8 8 8

Haga click en SAVE SETTINGS recuerde que cada vez que cambie algo, y apreté SAVE SETTINGS el router se reiniciara.

POR LO QUE RECOMENDAMOS QUE HAGA SUS CONFIGURACIONES CONECTADO POR CABLE AL EQUIPO en uno de los puertos que dicen LAN1 LAN2 LAN3 o LAN4 nunca en INTERNET

LINKSYS® A Division of Cisco Systems, Inc.		Firmware Version:
	Wireless-G Broa	dband Router WRT54G
Setup	Setup         Mireless         Security         Access         Applications           Basic Setup         I         DDNS         IMAC Address Clone         Image: Setup         Image: Setup <td< th=""><th>Administration Statu</th></td<>	Administration Statu
Internet Setup Internet Connection Type Optional Settings (required by some ISPs)	Automatic Configuration - DHCP  Router Name: WRT54G2 Host Name: APELLIDO Domain Name: MTU: Auto  Size: 1500	Automatic Configuration DHCP: This setting is most commonly used by Cable operators. Host Name: Enter the hos name provided by your ISP Domain Name: Enter the domain name provided by y ISP. More
Network Setup Router IP	Local IP Address: 192 . 168 . 1 . 1 Subnet Mask: 255.255.255.0	Local IP Address: This is address of the router. Subnet Mask: This is the subnet mask of the router.
Network Address Server Settings (DHCP)	DHCP Server:          • Enable C Disable          Starting IP Address:       192.168.1.100          Maximum Number of Iso       DHCP Users:         Client Lease Time:          minutes (0 means one day)          Static DNS 1:       190.112.219.666          Static DNS 2:           8           Static DNS 3:           0           WINS:	DHCP Server: Allows the router to manage your IP addresses. Starting IP Address: The address you would like to with. Maximum number of DI Users: You may limit the number of addresses your router hands out.
	Save Settings Cancel Changes	



PASO 3: En Wireless --- Basic Wireless Settins --- seleccione MANUAL

Luego complete "Wireless Network Name (SSID)" con el nombre de la red que ud quiera. NO USE SIMBOLOS RAROS



Haga click en SAVE SETTINGS y luego click en "Wireless Security" Aquí podrá configurar la clave.. asegúrese de que los otros campos estén como en la imagen.

LINKSYS® A Division of Cisco Systems, Inc.					Firm	ware Version: 1.0.01
				Wireless-G B	roadband Router	WRT54G2
Wireless	Setup V	Vireless Secu	urity Access Restriction	Applicatio s & Gaming	ns Administration	Status
	Basic Wireless Sett	ings   Wireless	Security   Wirele:	ss MAC Filter	Advanced Wireless Settings	
Wireless Security	Security Mo WPA Algorit WPA Shared Group Key	de: WPA2 hms: TKIP+ 3 Key: PON Renewal: 3600	Personal 💌 AES 🔍 ER CLAVE seconds		Security Mo choose from I Personal, W WPA2 Perso Enterprise, I devices on yo use the same order to comm More	de: You may Disable, WPA PA Enterprise, nal, WPA2 ADDUS, WEP. All ur network must security mode in unicate.
			Save Settings	Cancel Chang	es	cisco



PASO 4: Acceso remoto, se pide el acceso remoto para que soporte técnico pueda verificar la correcta configuración del equipo, pero si ud configuro todo como antes, no hace falta, ya que estos equipos no dan ningún tipo de estadística útil.

Para habilitar el acceso remoto, debe cambiar el password del equipo generalmente complete con clave wninternet

Y asegúrese que el resto de los casilleros estén como en la imagen y click en "SAVE SETTINGS"

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.					Firmwa	re Version: 1.0.01		
	Wireless-G Broadband Router WRT64G2							
Administration	Setup Wireless	Security	Access Restrictions	Applications & Gaming	Administration	Status		
Deutor Decoverd	Management   Lo	og   Diagnostics	Factory Defaults	Firmware Upg	grade   Config N	Management		
Local Router Access	Password: Re-enter to confirm:		••		Local Router A can change the f password from i new Router pass type it again in th confirm field to c	<b>ccess:</b> You Router's nere. Enter a sword and then e Re-enter to onfirm.		
Web Access	Access Server:  Wireless Access Web:	HTTP □HTTPS Enable ○Disabl	e		Web Access: A configure acces router's web utili More	Ilows you to s options to the ty.		
Remote Router Access	Remote A Management: A Management Port: a Use https: I	Enable CDisabl	e		Remote Router Allows you to ac router remotely. O you would like to change the pass router if it is still o password.	r Access: coess your Choose the port use. You must word to the using its default		
UPnP	UPnP: G	Enable C Disabl	e		UPnP: Used by o programs to auto ports for commu More	sertain matically open nication.		
		Save	Settings Cano	cel Changes		uluilu cisco		